



# Tianjin UKriver Science and Technology co.,ltd

## Production Specification

Customer: \_\_\_\_\_

Customer Audit: \_\_\_\_\_

Name:     Middle set negative LCD display    

Model:                     UKS3                    

Post Date: \_\_\_\_\_

Approver: \_\_\_\_\_

## 1. Production Name

Middle set negative LCD display, model UKS3

## 2. Supplier


Tianjin UKriver Science and Technology co.,ltd

## 3. SPEC

- ✧ 24V/36V/48V/60V/72V/UBE power supply
- ✧ Rated power 1W
- ✧ USB charge DC 5V 500mA
- ✧ Power off leak currant<1uA
- ✧ **Controller supply work currant** 100mA, peak lower than 300mA
- ✧ Operating temperature -20~70°C
- ✧ Storage temperature -30~80°C

## 4. Parameter and Material

The product shell is made of aluminum alloy, and the LCD transparent window is high-definition explosion-proof glass lens.

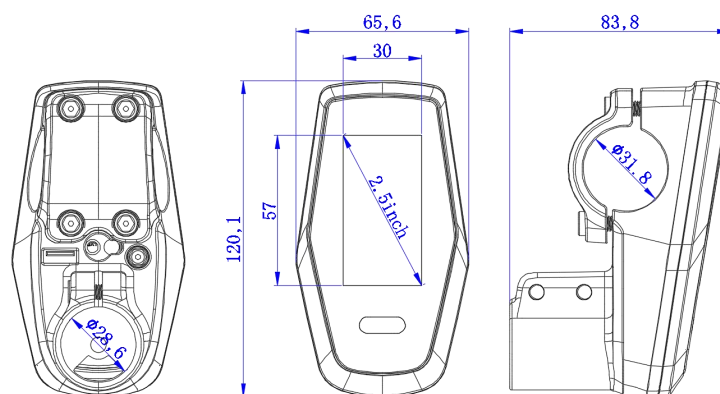



## 5. Production Introduction

- ✧ **Speed display:** including real-time speed “RT SPEED”, “MAX SPEED”, average speed “AVG SPEED”
- ✧ **SEETING SPEED SCALE(mph/kph):** Km / mile display can be set according to customer habits
- ✧ **Intelligent battery indicator:** Provide stable battery reminder through optimization algorithm, power is not affected by motor start-stop fluctuations, if the system supports battery communication, it can display accurate percentage power
- ✧ **5 levels of backlight brightness:** Set the brightness of the backlight according to customer usage habits. Level 1 is the darkest and Level 5 is the brightest
- ✧ **At most 9 gears:** Number of gears can be set according to user needs, like 3/5/9/6
- ✧ **Mileage display:** Can display accumulated mileage “ODO”, single mileage “Trip”, riding time “Time”
- ✧ **Output power indication:** Real-time display of output power (battery output power)
- ✧ **Fault Reason Display:** provide description for fault code
- ✧ **Walk assist function:** support 6km walk assist
- ✧ **Speed measuring magnets number adjustment:** numbers can be set according to the actual requirements of customers
- ✧ **PAS magnets number adjustment:** numbers can be set according to the actual requirements of customers
- ✧ **Endurance mileage indication (requires battery to support communication)**


- ✧ **Battery information display (requires battery to support communication)**
- ✧ **USB charging port, can provide rated charging for mobile devices, current: 500mA / 5V**
- ✧ **Program upgrade:** can be upgraded through serial port. For details, please refer to description documentation
- ✧ **Parameter setting:** parameters can be set by button, including gear, wheel diameter, voltage binning, limit speed, current limit, etc., please refer to the description of parameter setting

\*Bluetooth function can be added in the case of customized requirements.






## 6. LCD Display Instructions

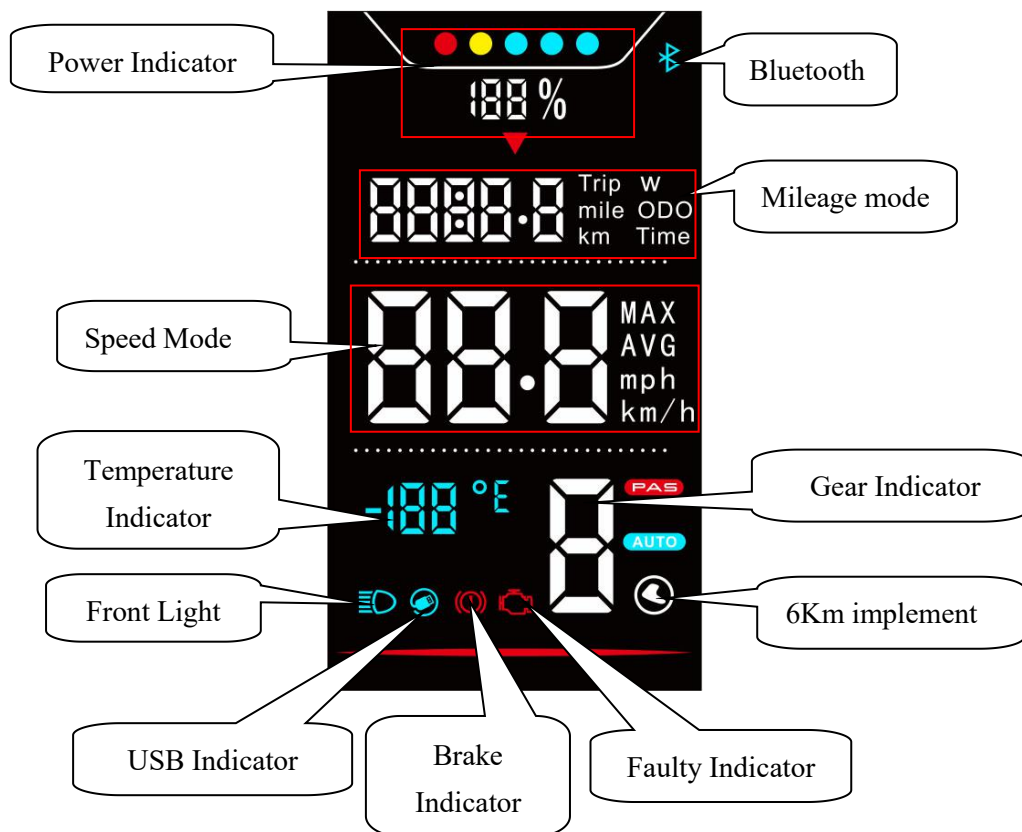LCD full display

as follow:



- ✧ **Speed mode:** average speed (AVG SPEED), maximum speed (MAX SPEED), real-time speed (RT SPEED)
- ✧ **Speed display:** display speed value, Km / h kilometers per hour, MPH miles per hour

- ✧ **Power Indicator:** Provide stable battery reminder through optimization algorithm, power is not affected by motor start-stop fluctuations, if the system supports battery communication, it can display accurate percentage power
- ✧ **Headlight indication:** display  when the headlights are on
- ✧ **Brake Indicator:** display  when brake power off.
- ✧ **Gear indicator:** Display the current power-assisted gears 0-9, where 0 is neutral and no power, and 1-9 corresponds to power-assisted gears. Display P  when in walk assist mode.
- ✧ **Faulty Indicator:** Display  when a fault is detected.
- ✧ **Mileage mode:** Divided into single mileage “TRIP”, accumulated mileage “ODO”, riding time “TIME”.
- ✧ **Mileage display:** Display mileage information or time information according to the set mode.
- ✧ **USB display:** the interface displays  when the USB charging function is turned on.

## 7. Function Description

Button description as follow:




### 7.1 Power On/Off

Long press(1 second) **Power Button** when the display is off, display, the display is fully displayed and starts to work, the power of the controller is turned on; Long press(1 second) **Power Button** when the display is on, display power off, the power of the controller is turned off. If you ride for 5 minutes (time can be set by the user) without operating the meter, the meter will automatically turn off the power.


### 7.2 PAS Gear Choose

In the manual shift mode, short press **Plus Button** or **Minus Button** to switch the assist position, change the assist ratio, the lowest 1st, the highest 9th, the default is 1st when the meter is turned on, and 0 is the neutral assist.

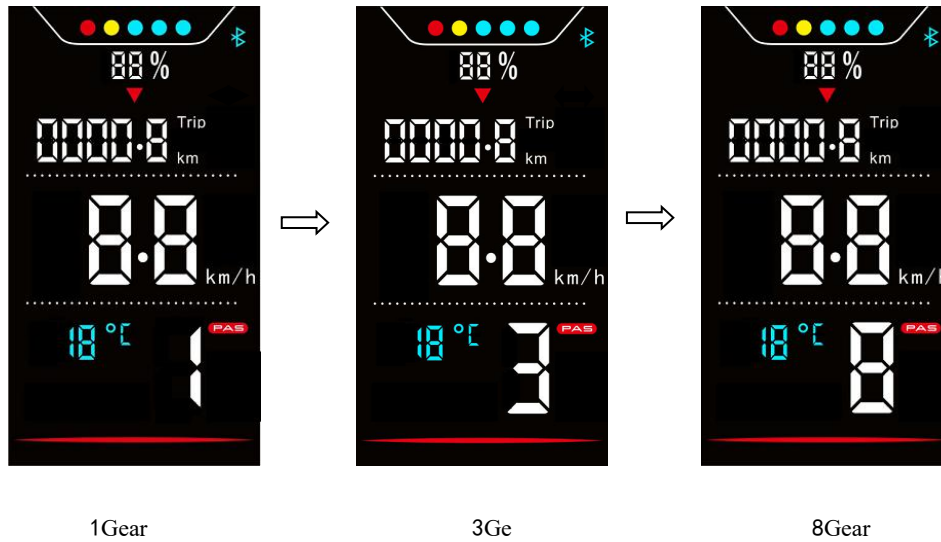

### 7.3 Mileage Mode Switch

When power on, short-press **Power Button** to switch the mileage display mode, and the following information is displayed cyclically: riding time (Time) → accumulated mileage (ODO) → power information (Pow) → single mileage (Trip).

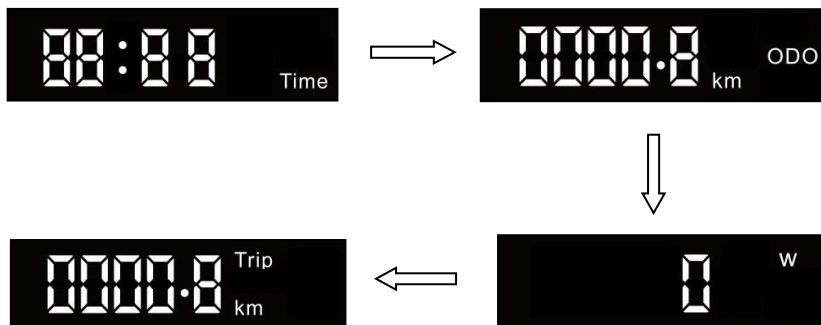

\*If there is no key operation for 5 seconds, the meter will automatically return to the real-time speed display state.

### 7.4 Speed Mode Switch


When power on, short press the **Mode Button** to switch the speed display mode, and the following information is displayed cyclically: real time speed (RT SPEED) → average speed (AVG SPEED) → maximum speed (MAX SPEED).



\*If there is no key operation for 5 seconds, the meter will automatically return to the real-time speed display state.

### 7.5 Headlight / Backlight Switch


Press and hold **Plus Button** (1 second), the brightness of the meter's backlight decreases, and the lights are turned on (requires controller support). Press and hold **Plus Button** again (1 second), the display backlight will return to its original brightness, and the lights will be turned off at the same time.

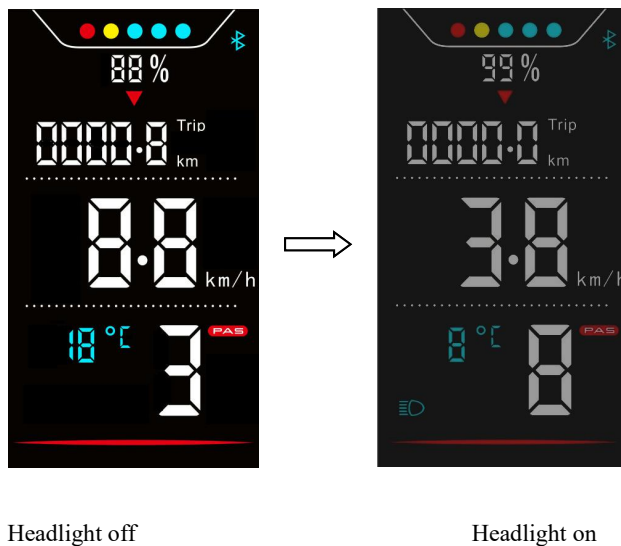

\* Meter backlight brightness can be adjusted in 5 levels. Users can set it according to their needs.

### 7.6 Walking Mode(6km walk assist)


Press and hold **Minus Button** (1 second), the electric bike enters the boosting state, the speed displays the real-time speed, and the gear position displays “P”. Release **Minus Button** to exit the walking mode.

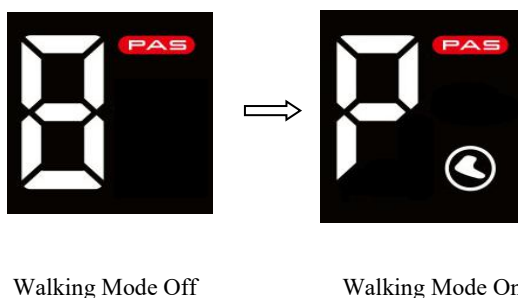

\*Some controllers may not support this function

### 7.7 USB Function

Long press **Mode Button** (1 second), the USB function is turned on, the user can use the USB function, and long press **Mode Button** for more than 1 second, the display will close the USB function, and the charging parameter is DC 5V 500mA.

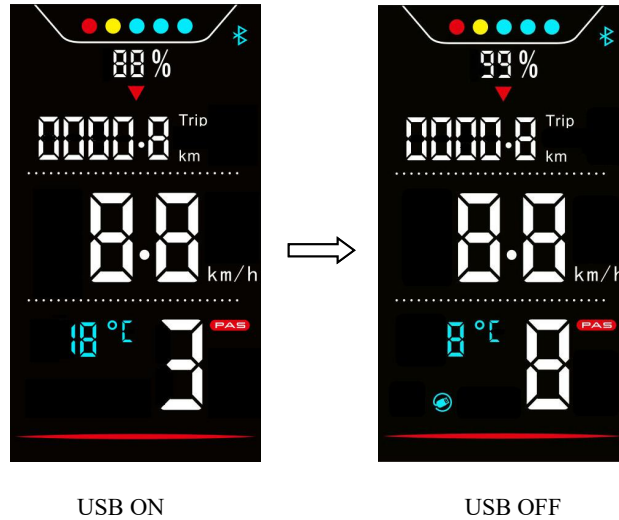

### 7.8 Clear Data

Press **Plus Button** and **Minus Button** simultaneously for 1 second to clear the temporary data. The cleared data includes the maximum speed (MAX SPEED), average speed (AVG SPEED), single mileage (TRIP), and riding time (TIME).

\*The above data will not be cleared when the display is turned off or the electric bike is turned off.

## 8. MENU Parameter Setting

When power on, press **Mode Button** twice (<0.3 seconds between presses), the system enters the parameter setting state. In this state, the meter parameters can be set. Press **Mode Button** twice again to exit the setting state. (<0.3 seconds between presses).


When in setting state, press **Mode Button** to select the desired adjustment item, when the parameter flashes, press **Plus Button** and **Minus Button** to adjust the parameter setting, press **Power Button** to save and switch, and press **Mode Button** twice to exit the setting state (<0.3 seconds between presses).

\*In the parameter setting state, if no key operation is performed for 30 seconds, the meter automatically exits the setting state. In the riding state (the speed indication is not 0), you cannot enter the



setting interface. If you start cycling in the setting interface (the speed indicator is not 0), you will automatically exit the setting.

### 8.1 The display setting items are as follows:

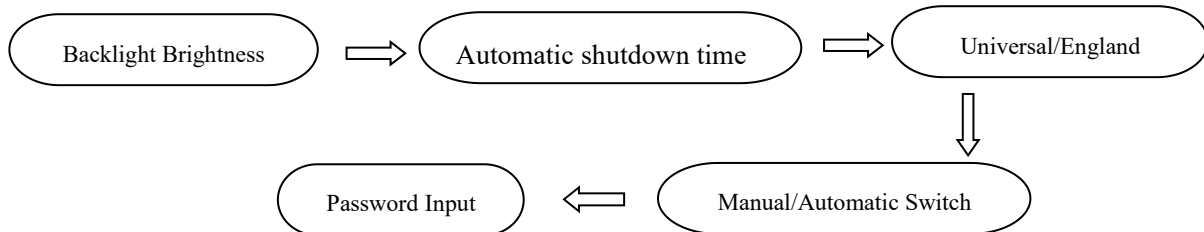


An example of setting project interface is as follows:



Backlight Brightness Adjust Interface


- ✧ **Backlight Brightness:** For item P1, press **Plus Button** and **Minus Button** to select the display 1 ~ 5, “1” is the darkest backlight and “5” is the brightest.
- ✧ **Automatic shutdown time:** for item P2, press **Plus Button** and **Minus Button** to adjust the position, 1 ~ 9 minutes represents the automatic shutdown time, OFF means cancel the automatic shutdown function.
- ✧ **Universal/ England:** for item P3, press **Plus Button** and **Minus Button** to switch km / h or MPH display, set Universal/ England: 0 stands for universal system and 1 stands for England system.
- ✧ **Manual / Automatic Switching:** for P4 item, press **Plus Button** and **Minus Button** to select manual / automatic switching. 0 means manual gear, 1 means automatic gear.
- ✧ **Password input:** enter ADS advanced setting items, the speed position of the display shows “ADS”, indicating that entering the password can enter advanced setting items. Short press **Mode Button** to enter the password input state, the speed position of the display will show “PSD” at the same time, prompt for the password, press **Plus Button** and **Minus Button** to set

the password value (0 ~ 9), press **Mode Button** to switch the password item, the password is 4 digits, and the default password "1801", press **Mode Button** to confirm the entry after the password adjustment is completed. If the password is wrong, "Err" will be displayed, and the display will automatically return to the real-time speed /single mileage display state. If the password is correct, enter the advanced settings sub-item.

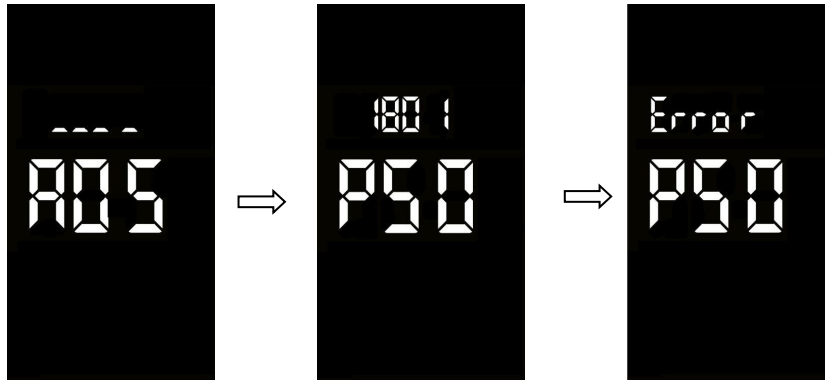


Password Input Surface

**8.2 The advanced setting items are as follows:**

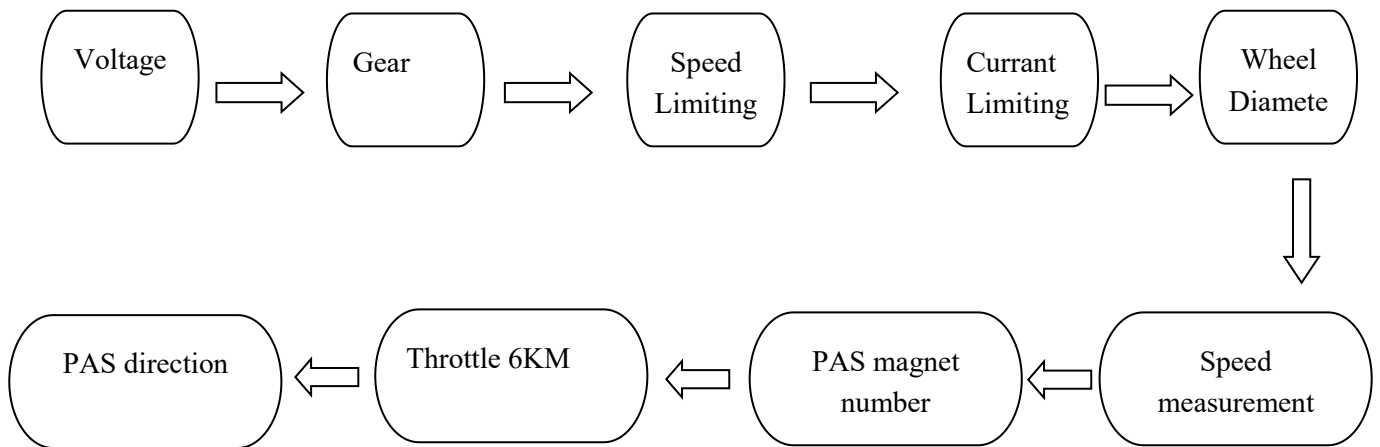

An example of advanced settings project interface is as follows:

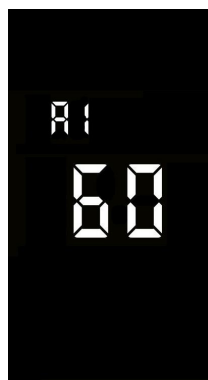

Voltage selection interface




- ✧ **Voltage Choices:** A1 item, Press **Plus Button** and **Minus Button** to switch between 24V / 36V / 48V / 60V / 72V / UBE. UBE stands for user-defined voltage (the voltage value can be set by a computer program. For details, please refer to the computer parameter setting instruction file).
- ✧ **Assistance gear selection:** item A2, **Plus Button** and **Minus Button** to set the gear range 3/5/9/6. 1 means 3-speed system; 2 means 5-speed system; 3 means 6-speed system; 4 means 9-speed system.
- ✧ **Speed Limiting Adjustment:** item A3, Press **Plus Button** and **Minus Button** to adjust the speed limit value. The default is 25km / h. Users can set the speed limit value according to their needs. After the adjustment is completed, press **Power Button** to confirm and exit.
- ✧ **Current Limiting Adjustment:** item A4, Press **Plus Button** and **Minus Button** to adjust the current limit value. The default is 15A. Users can set the current limit value according to their needs. After the adjustment is completed, press **Power Button** to confirm and exit.

\*Speed and current are restricted by the motor and controller at the same time and may not be able to reach the set value.

- ✧ **Wheel Diameter Selection:** item A5, press **Plus Button** and **Minus Button** to switch the display 16/18/20/22/24/26/27 / 700C / 28/29/30/31/32, select the corresponding wheel diameter, the unit is inch. Incorrect selection of wheel diameter will cause abnormal speed.
- ✧ **Number of speed measuring magnets:** item A6, press **Plus Button** and **Minus Button** to adjust the number of speed measuring magnets 1 ~ 72. The user can set the number of speed measuring magnets according to the requirements. After the adjustment is completed, press **Power Button** to confirm and exit.
- ✧ **Number of PAS magnets:** item A7, press the **Plus Button** and **Minus Button** to boost the number of booster magnets 3 ~ 15. The user can set the number of PAS magnets according to the needs. After the adjustment is completed, press **Power Button** to confirm and exit.
- ✧ **Throttle 6KM:** item A8 项, press **Plus Button** and **Minus Button** to select the 6km function switch.
- ✧ **PAS orientation:** item A9, press **Plus Button** and **Minus Button** to select the direction of the power sensor.

## 9. Error Code Definition


Meter can provide error indications for vehicle faults. When a fault is detected, the LCD screen displays , and the error code “n” and error description are displayed at the speed display position. Please refer to the error code comparison table to determine the corresponding fault.



Error Warning Interface

## 10. Installation Instruction

**10.1** Please refer to the following figure for the instrument screw assembly. Pay attention to the screw tightening torque. Instrument damage caused by excessive torque is not covered by the warranty.

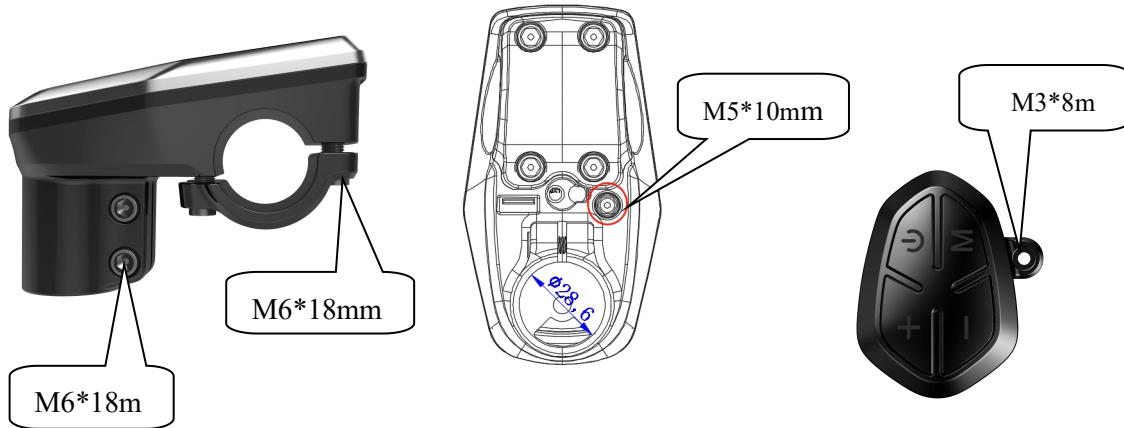

Screw Installation Drawing

**10.2** Clips are suitable for two handlebar sizes, 31.8mm, 25.4mm. Customers can choose according to actual needs.


And 25.4mm need to be matched with corresponding conversion.



Snap ring installation diagram

## 11.Cable Outlet Definition

The color of the five-core waterproof line is <red, blue, black, green, and yellow>. The order is defined as follows:

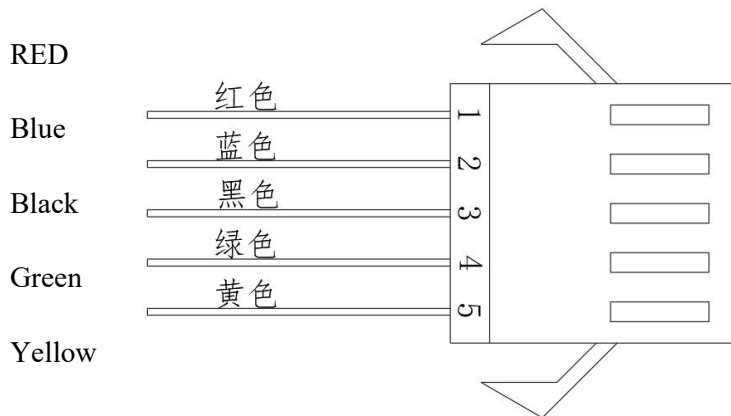

- 1、 RED: Power+ (Battery power 24V/36V/48V)
- 2、 Blue: Controller lock cable
- 3、 Black: GND
- 4、 Green: RXD display input signal, display receives signal from controller
- 5、 Yellow: TXD display output signal, display sends signal to controller